



6.4 RECORDING (ONLY FOR RECORDERS)


6.4.1 WHILE RECORDING SCREEN

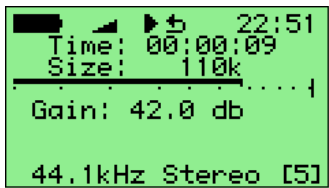

Recording Screen

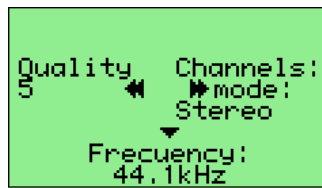

Recording F2 screen

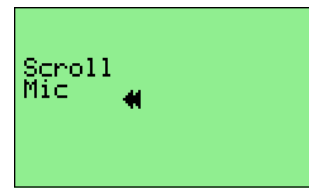

Recording F3 screen

Entering the "Recording" option in the Main menu launches the recording application.

The screen shows the time elapsed and the size of the file being recorded. A peak meter is present to allow you set Gain correctly. Frequency, channels and quality are shown on the last line.

The controls for this screen are:

BUTTON	FUNCTION
LEFT	Decreases Gain
RIGHT	Increases Gain
PLAY	Starts recording.
STOP	Exits Recording Screen. If Recording a file, stop recording.
F1	Opens Recording Settings screen (see section 6.4.2)
F2	Quick menu for recording settings. A quick press will leave the screen up (press F2 again to exit), while holding it will close the screen when you release it.
F3	Quick menu for source setting. Quick/hold works as for F2.

6.4.2 RECORDING SETTINGS

- **Quality**

Choose the quality here (0 to 7). Default is 5.

- **Frequency**

Choose the recording frequency. 48kHz, 44.1kHz, 32kHz, 24kHz, 22.05kHz, 16kHz are available.

- **Source**

Choose the source of the recording, micro, line or spdif.

- **Channels**

You can choose here between the different channels modes on rockbox:

- Mono